

V-SFT Ver.6 Update Procedure

This document explains the update procedure for V-SFT using the update modules that you can download from our website.

[Either or both V-SFT-5 or V-SFT-6 already installed]

1. Download the update module for V-SFT-6 from our website.

The download page is [here](#).

- * You need to register as a member to download the update module.
- * If installing V-SFT Ver. 5 in “C:\Program Files” on Windows Vista or later, it may not work properly. In this case, please refer to “[Update procedure for the V-SFT CD-ROM Ver.5.4.18.0 or earlier](#)” and reinstall.

The screenshot shows the Fuji Electric website's 'Software search' page. The 'Product category' filter is set to 'Software', and the 'Filter by document type' is set to 'Software'. The search results show 9 results, with the first result being the 'V-SFT-6 Update module Version 6.2.5.0 *For 10, V9, V8, TS and X1 series only'. The document details are as follows:

Document type	Document No.
Software	Ver. 6.2.5.0

Supported languages of document: Japanese / English / Chinese Simplified
 Countries and regions covered: Global / Asia / Japan / China / Americas / Europe
 Product handling category: Current products Month of publication: Dec. 2024 File format: EXE(2.7GB)
 Login: Necessary



Below the update module, there is a section for 'Manuals for V-SFT-6 ENG' with the following details:

Document type	Document No.
Software	Ver. 6_manu_e

Supported languages of document: English / Chinese Simplified
 Countries and regions covered: Global / Asia / China / Americas / Europe
 Product handling category: Current products Month of publication: Apr. 2025 File format: EXE(461.5MB)
 Login: Unnecessary

2. Double-click the module downloaded in step 1.


- V-SFTV6_Update(V6.x.x.0).exe ("x" designates the version number.)

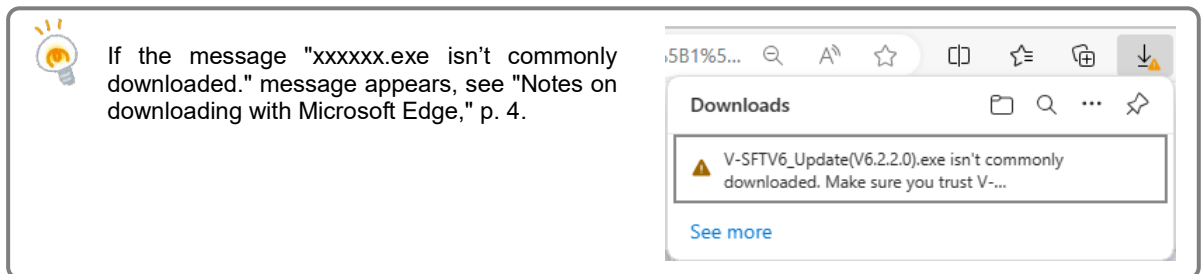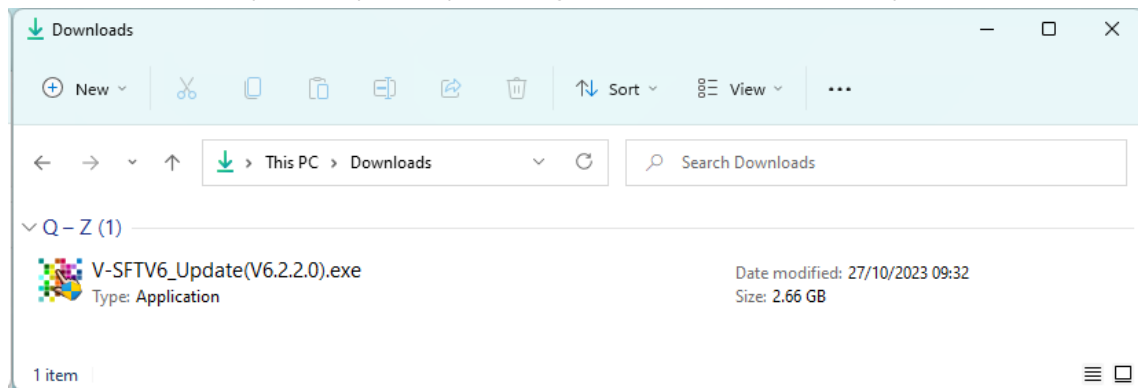

3. Follow the procedures to update after the installer starts up.


* Be sure to close V-SFT-5/V-SFT-6 before the installation.

* You need to have authority as an Administrator for the update.

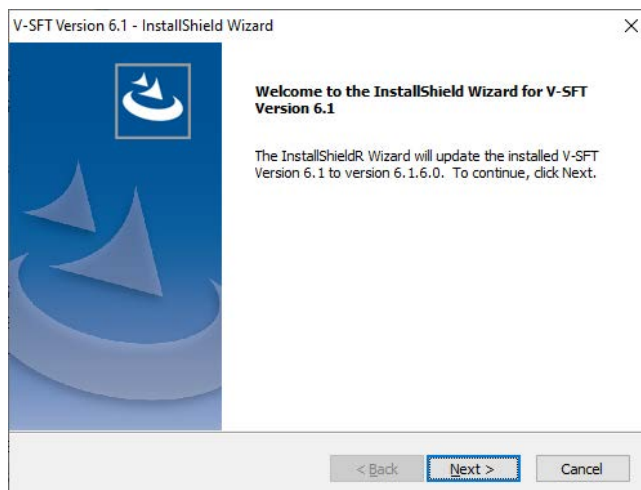

4. You need to download the manuals for help menu separately.

Select "Manuals for V-SFT-6" from the search results in step 1 and download it.

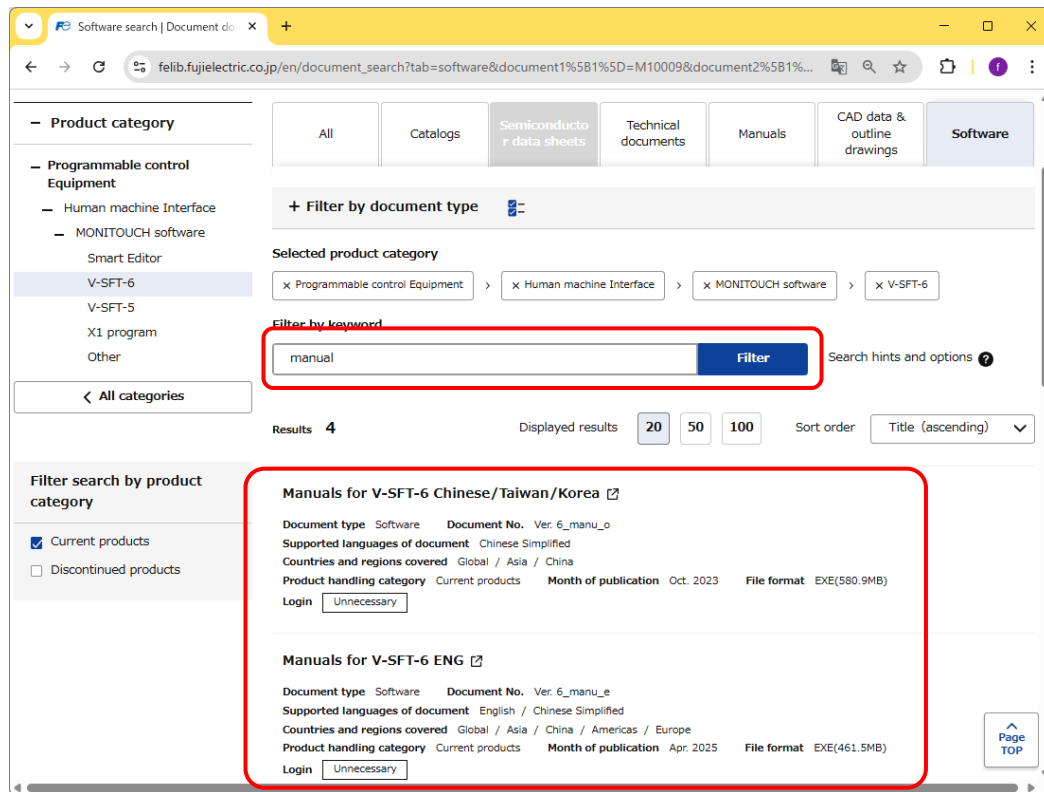

5. Double-click the module (VSFTV6_Manual.exe) from step 4.
Follow the procedures to update after the installer is started up.
- * Close V-SFT-6 before the installation.
 - * Administrator authentication is required.

[Neither V-SFT-5 nor V-SFT-6 installed]

Please purchase DVD-ROM of V-SFT-6.

(The update module from our website is only for the update. It cannot be used for installation.)

- * However, if you have CD-ROM/DVD-ROM for configuration software "V-SFT" or "UG00S-CW", you may be able to update to "V-SFT-6".

The installation procedure differs depending on the OS of your PC and the version of your CD-ROM/DVD-ROM.


For the detailed procedure for installation, see the ["Update procedure for the V-SFT CD-ROM Ver.5.4.18.0 or earlier"](#).




Notes on downloading with Microsoft Edge

If you receive a message due to the security feature of Microsoft Edge, please follow the instructions below to download the module.

- 1) Place the mouse cursor over the displayed message, click the "... " icon to the right of the message, and click "Save".

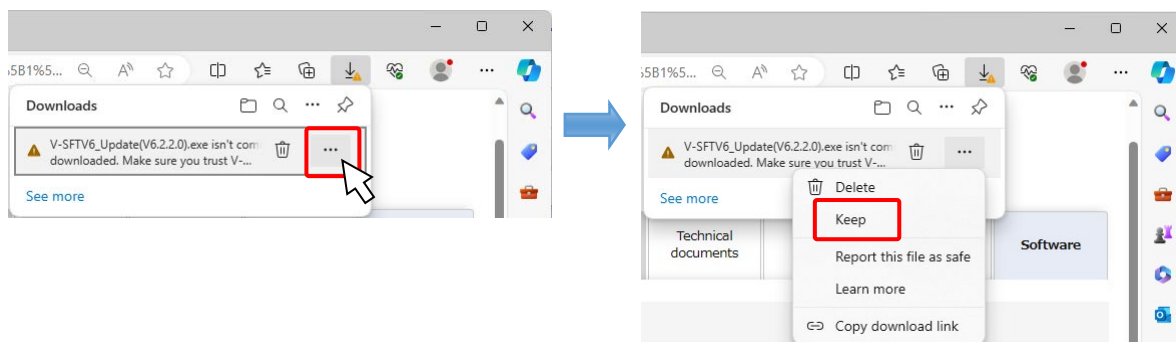

- 2) When the message "Make sure you trust xxxxxx.exe, before you open it" appears, click "Show more" and then click "Keep anyway".

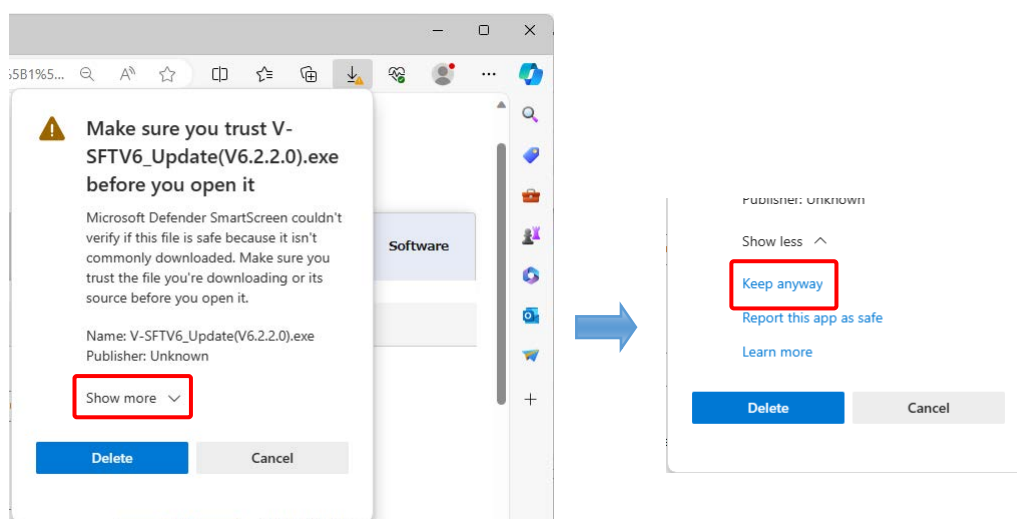

The download is now complete.

